

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER: To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning, removing, or assembling parts.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children and individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Andis.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an Andis Service Center for examination or repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this appliance with a damaged or broken blade or comb, as injury to the skin may occur.
9. To disconnect turn control to "off" then remove plug from outlet.

SAVE THESE INSTRUCTIONS THIS PRODUCT INTENDED FOR HOUSEHOLD USE

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

OPERATING INSTRUCTIONS

Please read the following instructions before using your new Andis Clipper. Give it the care that a fine precision built instrument deserves and it will give you years of service. Before starting clipper use, it is advised to purchase a new set of blades available through your Andis Supplier or through an Andis Authorized Repair Station. If you wish your clipper to be repaired, it should be carefully packed and mailed either Parcel Post Insured, or U.P.S. to an Andis Authorized Repair Station. See the warranty section in this manual for more information.

(FOR PM-3L MODELS ONLY)

To start the clipper and LED lights, move switch button to "ON" position. To stop, move switch button to "OFF" position. After using your Andis Clipper, rewrap cord, and store in a safe place.

The LED lights provide you with these features:

- 1) Exclusive Andis LED circuit for maximized LED life.
- 2) Three LEDs for full blade coverage.
- 3) Rugged LEDs withstand clipper use without burning out.
- 4) Ultra-bright white LED light source generates no heat.

USER MAINTENANCE

The internal mechanism of your clipper has been permanently lubricated at the factory. Other than the recommended maintenance described in this manual, no other maintenance should be performed, except by Andis Company or an Andis Authorized Repair Service Station.

CARE AND SERVICING OF YOUR ANDIS CLIPPER BLADES

Blades should be oiled before, during, and after each use. If your clipper blades leave streaks or slow down, it's a sure sign blades need oil. The clipper should be held in the position shown in Diagram B to prevent oil from getting into the motor. Place a few drops of Andis Clipper Oil on the front and side of the cutter blades (Diagram A). Wipe excess oil off blades with a soft dry cloth. Spray lubricants contain insufficient oil for good lubrication. Always replace broken or nicked blades to prevent injury. You can clean the excess hair from your blades by using a small brush or worn out toothbrush. To clean the blades we suggest to immerse the blades only into a shallow pan of Andis

Clipper Oil, while the clipper is running. Any excess hair and dirt that has accumulated between the blades should come out. After cleaning, turn your clipper off and dry blades with a dry cloth and start clipping again.

FACTORY REPAIR SERVICE

When the blades of your Andis Clipper become dull after repeated use, it is advised to purchase a new set of blades available through your Andis Supplier or through an Andis Authorized Repair Station. If you wish your clipper to be repaired, it should be carefully packed and mailed either Parcel Post Insured, or U.P.S. to an Andis Authorized Repair Station. See the warranty section in this manual for more information.

REPLACEMENT (REMOVAL) OF BLADE SET

To remove the blades, first unplug the clipper from the electrical outlet. Turn the clipper upside down, so that the blade teeth are pointing down. You may want to place the clipper on a flat surface to do this. Unscrew the screws on the blade (Diagram C).

Remove the blades. To replace the blades, put the smaller upper blade back into position (Diagram D). Line up the screw holes in the bottom blade with the two holes in the clipper housing, and replace screws. Do not tighten down screws completely. Turn clipper over and align lower blade so teeth on both blades are parallel, but with lower blade's teeth slightly above the upper blade teeth. Failure to do this may result in nipping the skin when cutting the hair.

ATTACHING THE CLIPPER COMBS

The clipper comb blade attachments mount easily. Just snap them on. Snap them off. You can always set the blades for a coarser cut by attaching any of the snap-on blade attachments made for your Andis Clipper.


To use blade attachment, slip the cutter blade teeth into blade attachment. Snap the blade attachment down; they snap on and off easily. These attachments guide hair into the clipper blades and give you precise control of hair lengths. The length of trim is indicated on the blade attachment: 1/16", 1/8", 1/4", 3/8", 1/2", 3/4" & 1". Use the chart below to find the approximate lengths of cut. Different blade angles in relation to the skin, thickness and texture of the hair will vary the cutting length.

GENERAL INSTRUCTIONS TO CUTTING HAIR

Conventional Boy's and Men's Cut

Step One: Oil clipper blades before first use and before and after each use. Always use Andis Clipper Blade Oil. Secure 3/8" attachment comb on clipper (optional). Comb hair the way it is worn naturally.

Step Two: Trim hair at base of neck with comb and clipper. Taper the

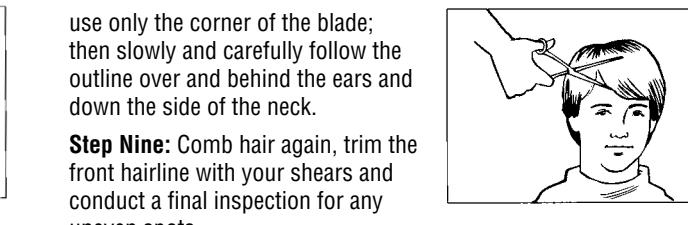

CLIPPER BLADE ADJUSTMENT

Your Andis Adjustable Clipper Blade set is easy to adjust. From coarse to fine cuts, all that's needed is a flick of the adjustment lever with your thumb. In the upright position, blades are set for the finest, or shortest cuts.

REPLACEMENT (REMOVAL) OF BLADE SET

To remove the blades, first unplug the clipper from the electrical outlet. Turn the clipper upside down, so that the blade teeth are pointing down. You may want to place the clipper on a flat surface to do this. Unscrew the screws on the blade (Diagram C).

Remove the blades. To replace the blades, put the smaller upper blade back into position (Diagram D). Line up the screw holes in the bottom blade with the two holes in the clipper housing, and replace screws. Do not tighten down screws completely. Turn clipper over and align lower blade so teeth on both blades are parallel, but with lower blade's teeth slightly above the upper blade teeth. Failure to do this may result in nipping the skin when cutting the hair.

ATTACHING THE CLIPPER COMBS

The clipper comb blade attachments mount easily. Just snap them on. Snap them off. You can always set the blades for a coarser cut by attaching any of the snap-on blade attachments made for your Andis Clipper.

To use blade attachment, slip the cutter blade teeth into blade attachment. Snap the blade attachment down; they snap on and off easily. These attachments guide hair into the clipper blades and give you precise control of hair lengths. The length of trim is indicated on the blade attachment: 1/16", 1/8", 1/4", 3/8", 1/2", 3/4" & 1". Use the chart below to find the approximate lengths of cut. Different blade angles in relation to the skin, thickness and texture of the hair will vary the cutting length.

GENERAL INSTRUCTIONS TO CUTTING HAIR

Conventional Boy's and Men's Cut

Step One: Oil clipper blades before first use and before and after each use. Always use Andis Clipper Blade Oil. Secure 3/8" attachment comb on clipper (optional). Comb hair the way it is worn naturally.

Step Two: Trim hair at base of neck with comb and clipper. Taper the



PRECAUTIONS IMPORTANTES ESTE APARATO ESTÁ DISEÑADO PARA USO DOMÉSTICO

Al usar un aparato eléctrico deben de seguirse determinadas precauciones básicas, incluyendo las siguientes.

LEA ATENTAMENTE TODAS LAS INSTRUCCIONES ANTES DE USAR ESTE APARATO ANDIS.

PELIGRO: Para reducir el riesgo de una descarga eléctrica:

1. No coja el aparato cuando caiga dentro del agua. Desconéctelo inmediatamente.

2. No lo use mientras se esté bañando o en la ducha.

3. No lo coloque o almacene donde pueda caerse o ser empujado dentro de una bañera o lavabo.

4. Desenchufe siempre el aparato de la toma eléctrica inmediatamente después de su uso.

5. Desenchufe el aparato antes de limpiar, sustituir o colocar sus partes.

INSTRUCCIONES DE OPERACIÓN

Por favor lea las instrucciones siguientes antes de utilizar su nueva maquinilla Andis. Dele el cuidado que un instrumento de gran precisión merece y a cambio obtendrá años de servicio en su hogar. Antes de ponerla en marcha retire la cubierta de las cuchillas, conecte el cordón en el enchufe eléctrico, hágala funcionar con corriente alterna de 60 ciclos y 120 voltios o el voltaje indicado en esta manual.

Step Four: Time to trim the top of the head. If there is a part in the hair, make sure it is in its proper place. Now comb the hair forward toward the face. Then standing behind the person, secure a section of hair between your first and second fingers. Control the amount of hair to be cut by the amount of hair that extends beyond your fingers. Then, using either the clipper or the barber shears, trim the front to the back of the head.

Step Five: Continue this method of trimming. As you work from front to back, you can gradually cut hair shorter (if you wish) by holding your fingers closer to the head, allowing more hair to be trimmed.

Step Six: Holding hair between fingers, continue layer cutting hair. Each layer should be cut about 1/4" longer than the layer underneath.

Step Seven: Part hair vertically from the crown to the ear. Comb hair to sides and fasten sections in place with clips. Hold hair over ears between fingers. Trim hair to desired length. Continue as in step three. Then cut behind ear, connecting lengths and layers. Repeat on other side.

Step Eight: Trim hair at base of neck with comb and clipper. Taper the

GUARDE ESTAS INSTRUCCIONES

PRECAUCIONES IMPORTANTES

COLOCACIÓN DE LOS PEINES EN LA MAQUINILLA DE CORTAR EL PELO

Para reducir el riesgo de descargas eléctricas, este artefacto tiene un enchufe polarizado (una patilla es más ancha que la otra). Este enchufe encarárse en un tomacorriente polarizado de una sola manera. Si el enchufe no puede insertarse completamente en el tomacorriente, invierta el enchufe. Si aún no puede insertarse, póngase en contacto con un electricista calificado para instalar el tomacorriente apropiado. No cambie el enchufe de manera alguna.

INSTRUCCIONES DE OPERACIÓN

Para usar un accesorio de cuchilla, introduzca los dientes de la cuchilla en su maquinilla Andis, mientras la maquinilla está funcionando. Así debe poder eliminar cualquier exceso de pelo o de polvo que se haya acumulado entre las cuchillas. Después de limpiar las cuchillas, apague la maquinilla y saque las cuchillas con una tela seca, y comience a recortar otra vez.

Step One: Begin layer cut by parting the hair vertically down the middle in the back. Make a horizontal part several inches above the bottom of the hair line. Comb shorter hairs down, longer layer forward and over the ears. With scissors, cut shortest layers to desired length.

Step Two: Comb hair up, away from nape of neck and with a barrette fasten in place. Hold clippers upside down to clean nape of neck.

Step Three: Holding hair between fingers, continue layer cutting hair. Each layer should be cut about 1/4" longer than the layer underneath.

Step Four: Part hair vertically from the crown to the ear. Comb hair to sides and fasten sections in place with clips. Hold hair over ears between fingers. Trim hair to desired length. Continue as in step three. Then cut behind ear, connecting lengths and layers. Repeat on other side.

Step Five: Trim hair at base of neck with comb and clipper. Taper the

SERVICIO DE REPARACIÓN EN FÁBRICA

Cuando las hojas de su Recortadora Andis pierdan el filo después de un uso repetido, se aconseja comprar un conjunto nuevo de hojas, disponible por medio de su Proveedor Andis o por medio de una Estación de Reparación Autorizada de Andis. Si deseas que la recortadora reciba servicio técnico, deberás embalarla cuidadosamente y enviarla por correo asegurado o por U.P.S. a una Estación de Reparación Autorizada de Andis. Consulta la sección de garantía de este manual para obtener más información al respecto.

ÚNICAMENTE PARA LOS MODELOS PM-3L

Para encender la recortadora y las luces LED, mueva el botón interruptor a la posición "ON" (encendido). Para apagarla, mueva el botón interruptor a la posición "OFF" (apagado). Después de usar su recortadora Andis, vuelva a enrollar el cable y almácela en un lugar seguro.

PRECAUCIÓN: Para reducir el riesgo de quemaduras, fuego, descargas eléctricas o daño a personas:

1. Un aparato eléctrico no debe dejarse desatendido una vez enchufado.

2. Es necesaria una supervisión muy de cerca cuando este artefacto sea usado por, en o cerca de niños y personas con ciertas discapacidades.

Las luces LED proporcionan estas características:

1) Circuito exclusivo para las luces LED de Andis para brindar una máxima vida útil de las luces LED.

2) Tres luces LED para una completa cobertura de la hoja.

3) Las luces LED robustas soportan el uso de la recortadora.

3. Utilice este aparato únicamente para el uso para el que fue pensado el modo descrito en este documento.

4. No utilice nunca este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

5. Utilice este aparato únicamente para el uso para el que fue pensado el modo descrito en este documento.

6. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

7. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

8. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

9. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

10. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

11. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

12. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

13. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

14. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

15. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

16. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

17. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

18. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

19. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

20. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.

21. No utilice este aparato si tiene un cordón o enchufe en mal estado, si no funciona correctamente, o si no funciona de acuerdo con las especificaciones.